

# Home Decorators


Collection

HDC# 08050 MFG# TW-18404IY  
SOUTHPORT COFFEE TABLE 18"Hx42"W x24"D

## ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.


Made In China

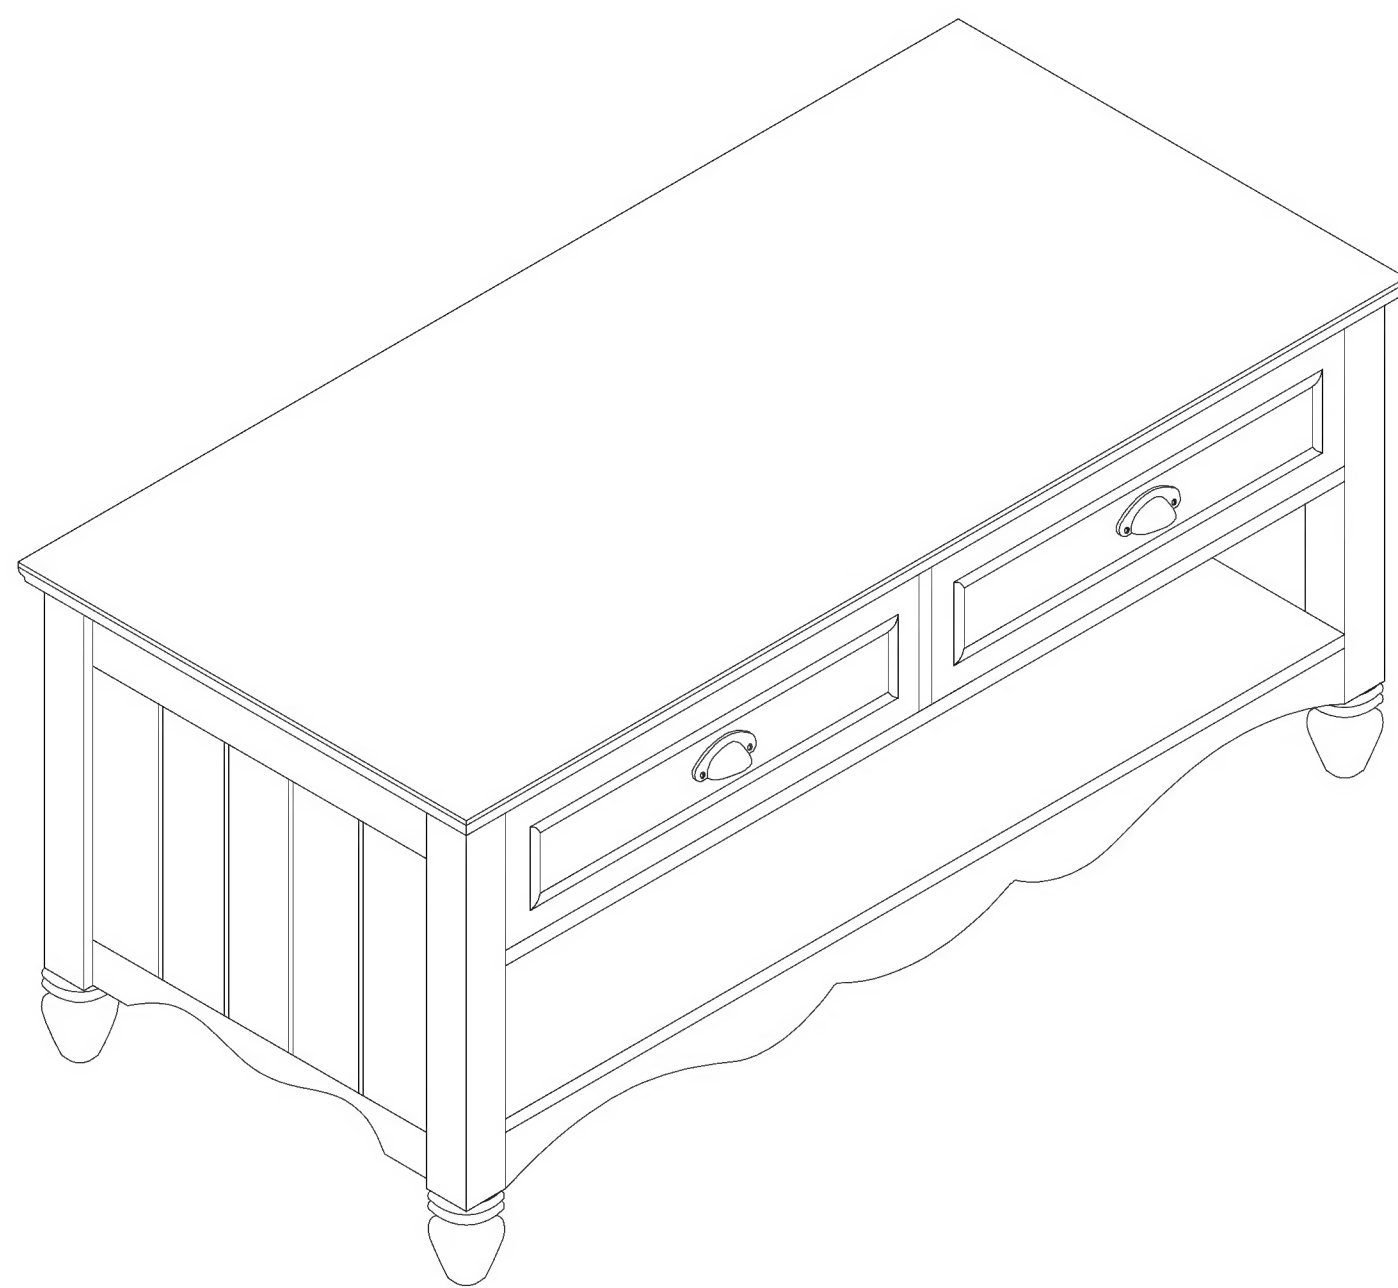

# BEFORE ASSEMBLY


**IMPORTANT NOTE:** READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

## ASSEMBLY TOOLS REQUIRED

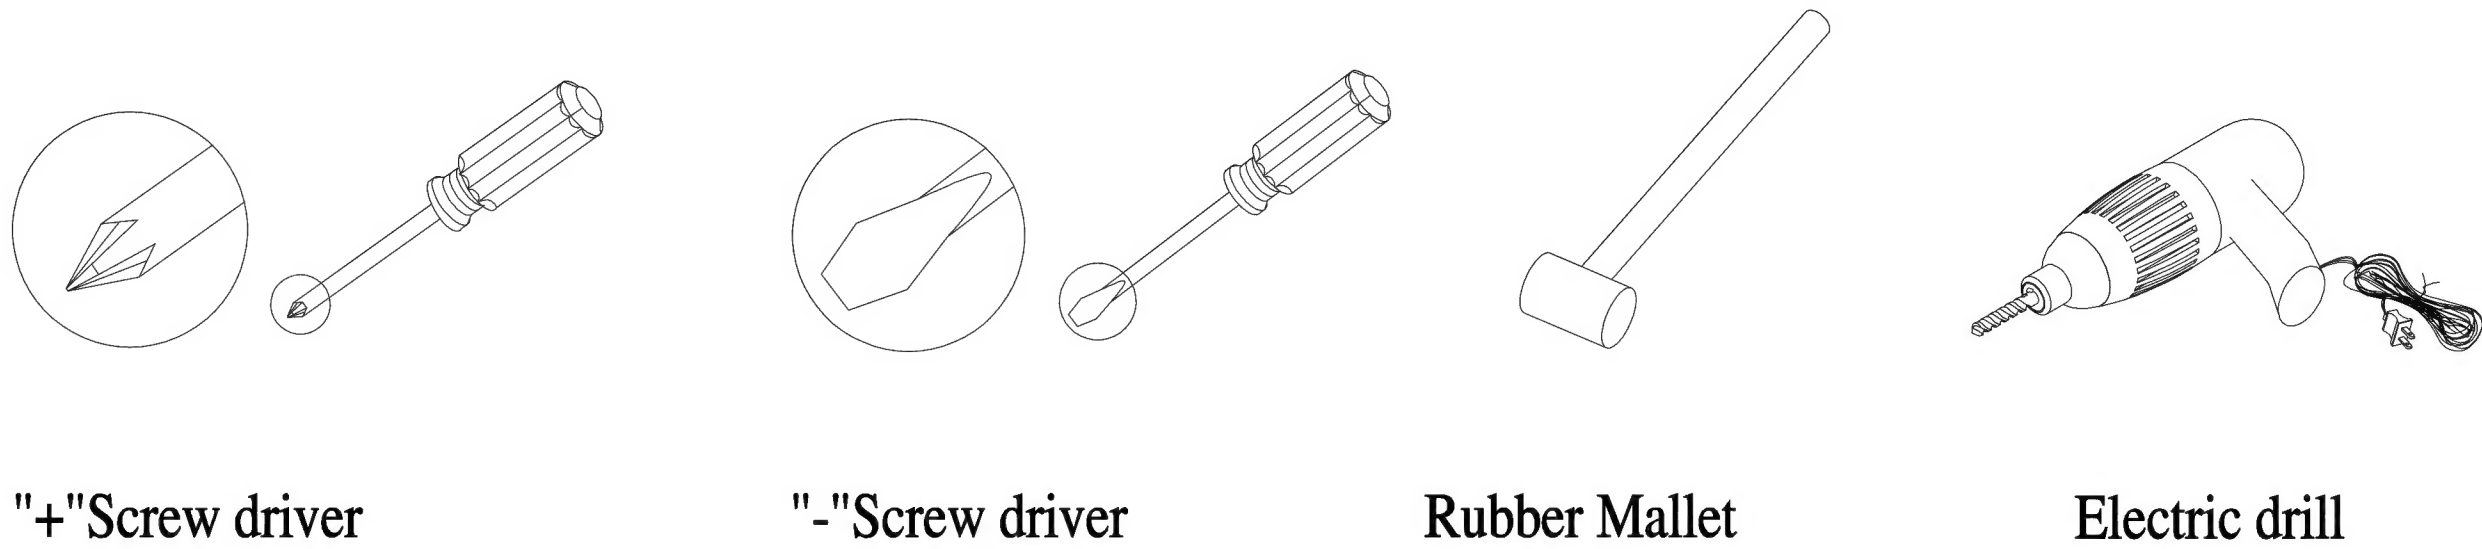

## WOODEN DOWEL INSTALLATION PROCEDURE





- (1) FILL HOLE 1/4 FULL OF GLUE.
- (2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET OR USE HAND PRESS IN.  
DO NOT USE HAMMER
- (3) WIPE AWAY EXCESS GLUE.

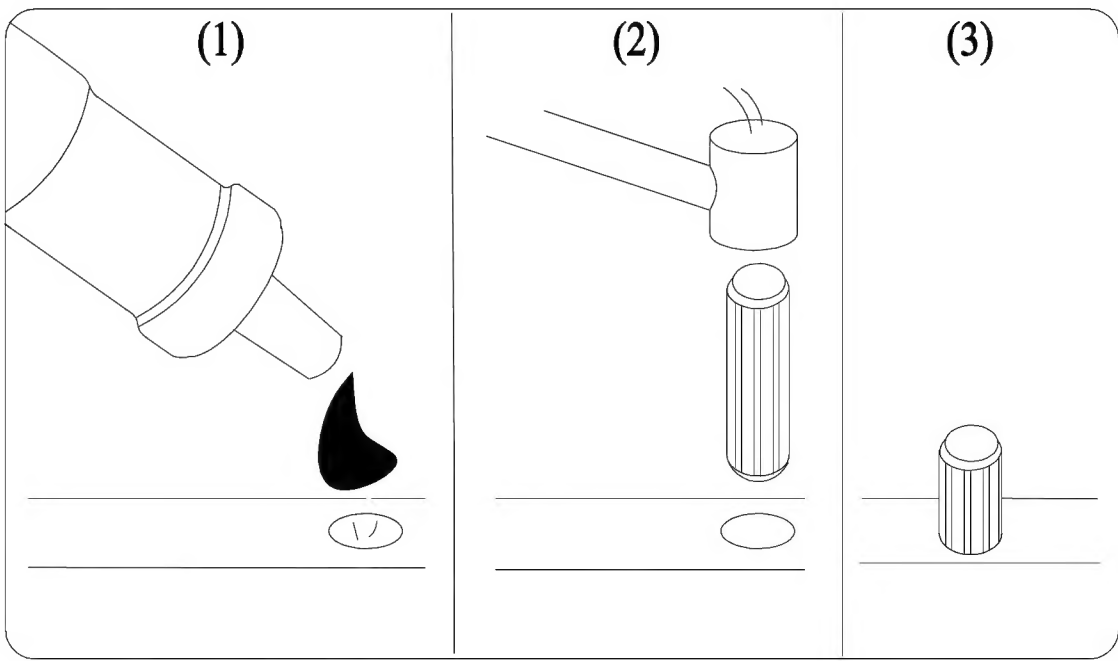

## PARTS LIST


<div>BOTTOM PANEL 1 PC</div> <div></div> <div>A</div>	<div>ACROSS PANEL 2 PCS</div> <div></div> <div>B</div>	<div>LEFT SIDE FRAME 1 PC</div> <div></div> <div>C</div>
<div>RIGHT SIDE FRAME 1 PC</div> <div></div> <div>D</div>	<div>TABLE TOP 1 PC</div> <div></div> <div>E</div>	

# HARDWARE LIST

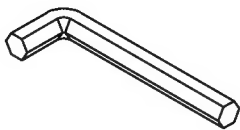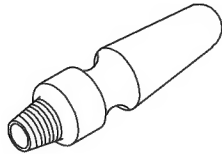WOOD DOWEL 16 PCS  (1)	ROUND HEAD BOLT FLAT WASHER 16 SETS  (2)	ALLEN KEY 1 PC  (3)	GLUE 1 PC  (4)
--	--	---	--


## STEP 1: ASSEMBLE ACROSS PANEL (B) ON BOTTOM PANEL (A)

- FILL RELEVANT HOLES OF BOTTOM PANEL (A) 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2)
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ATTACH ACROSS PANEL (B) AND BOTTOM PANEL (A) TOGETHER BY ALLEN KEY (3).

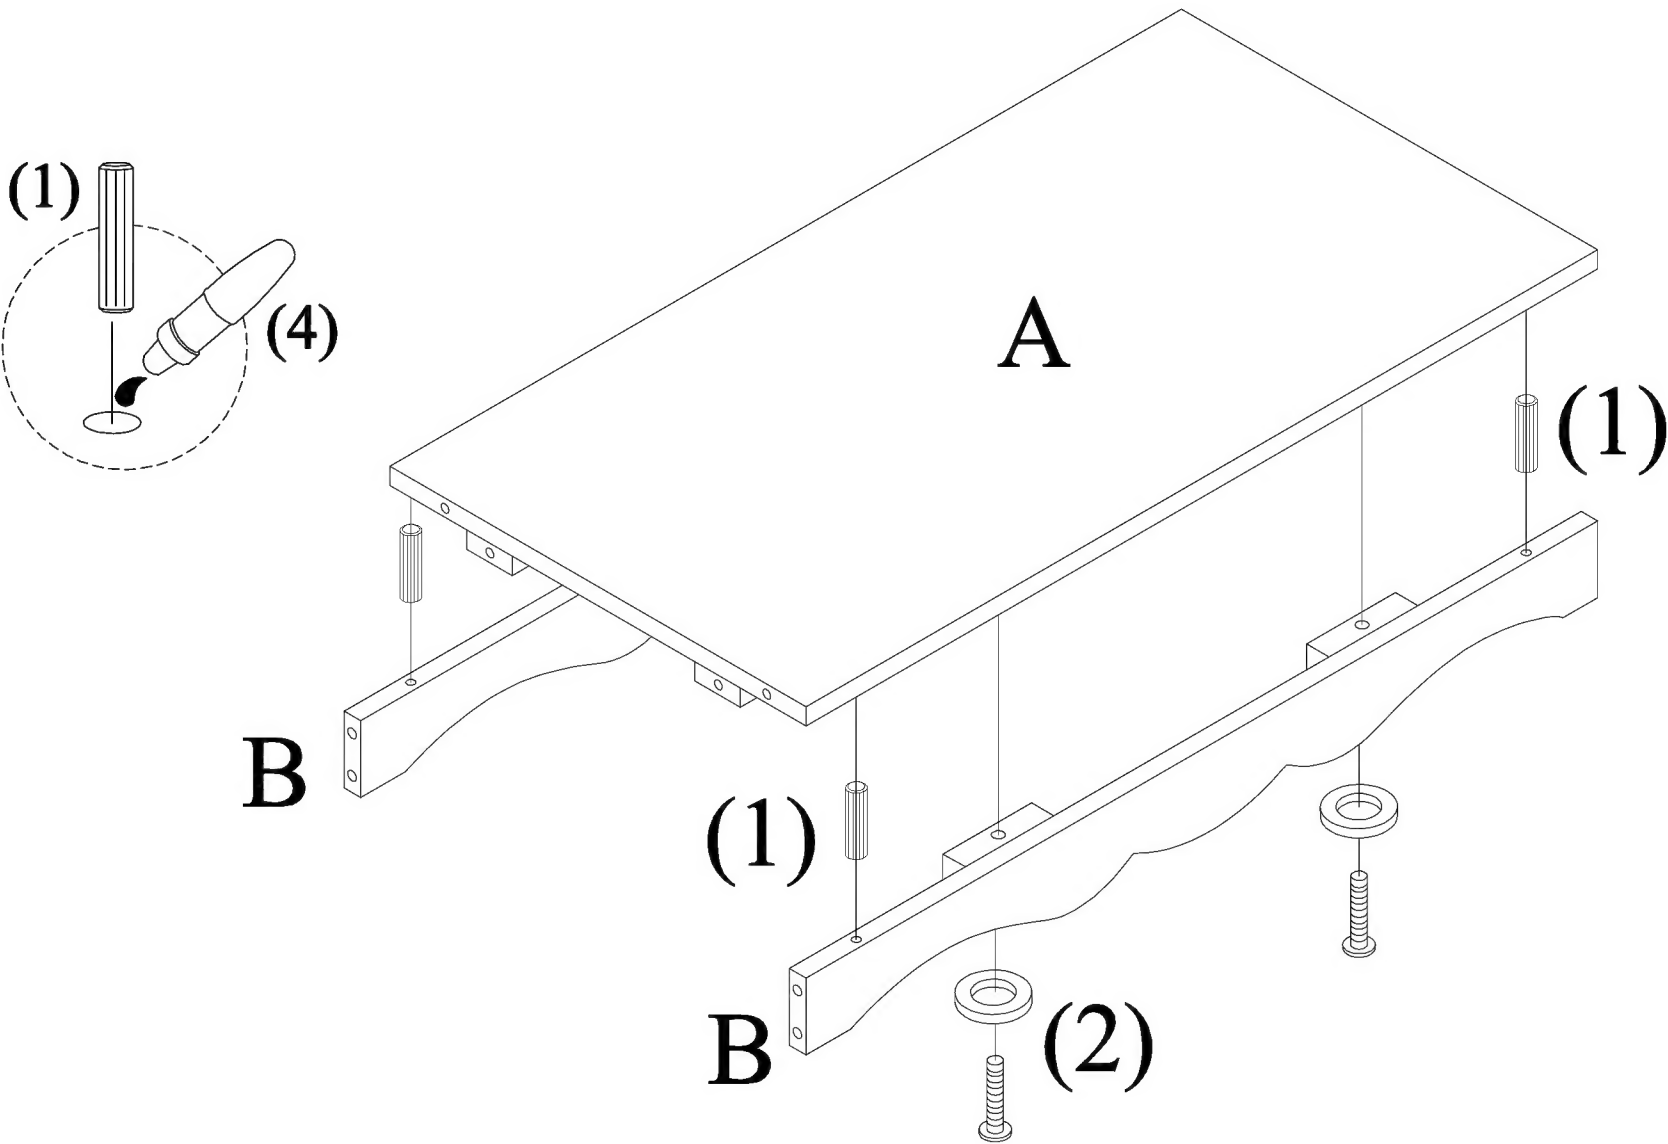

**STEP 2: ASSEMBLE SIDE FRAME (C & D) AND TABLE TOP (E)**

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES AS SHOWN. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ASSEMBLE SIDE FRAME (C & D), BOTTOM (A) AND TABLE TOP (E) TOGETHER.

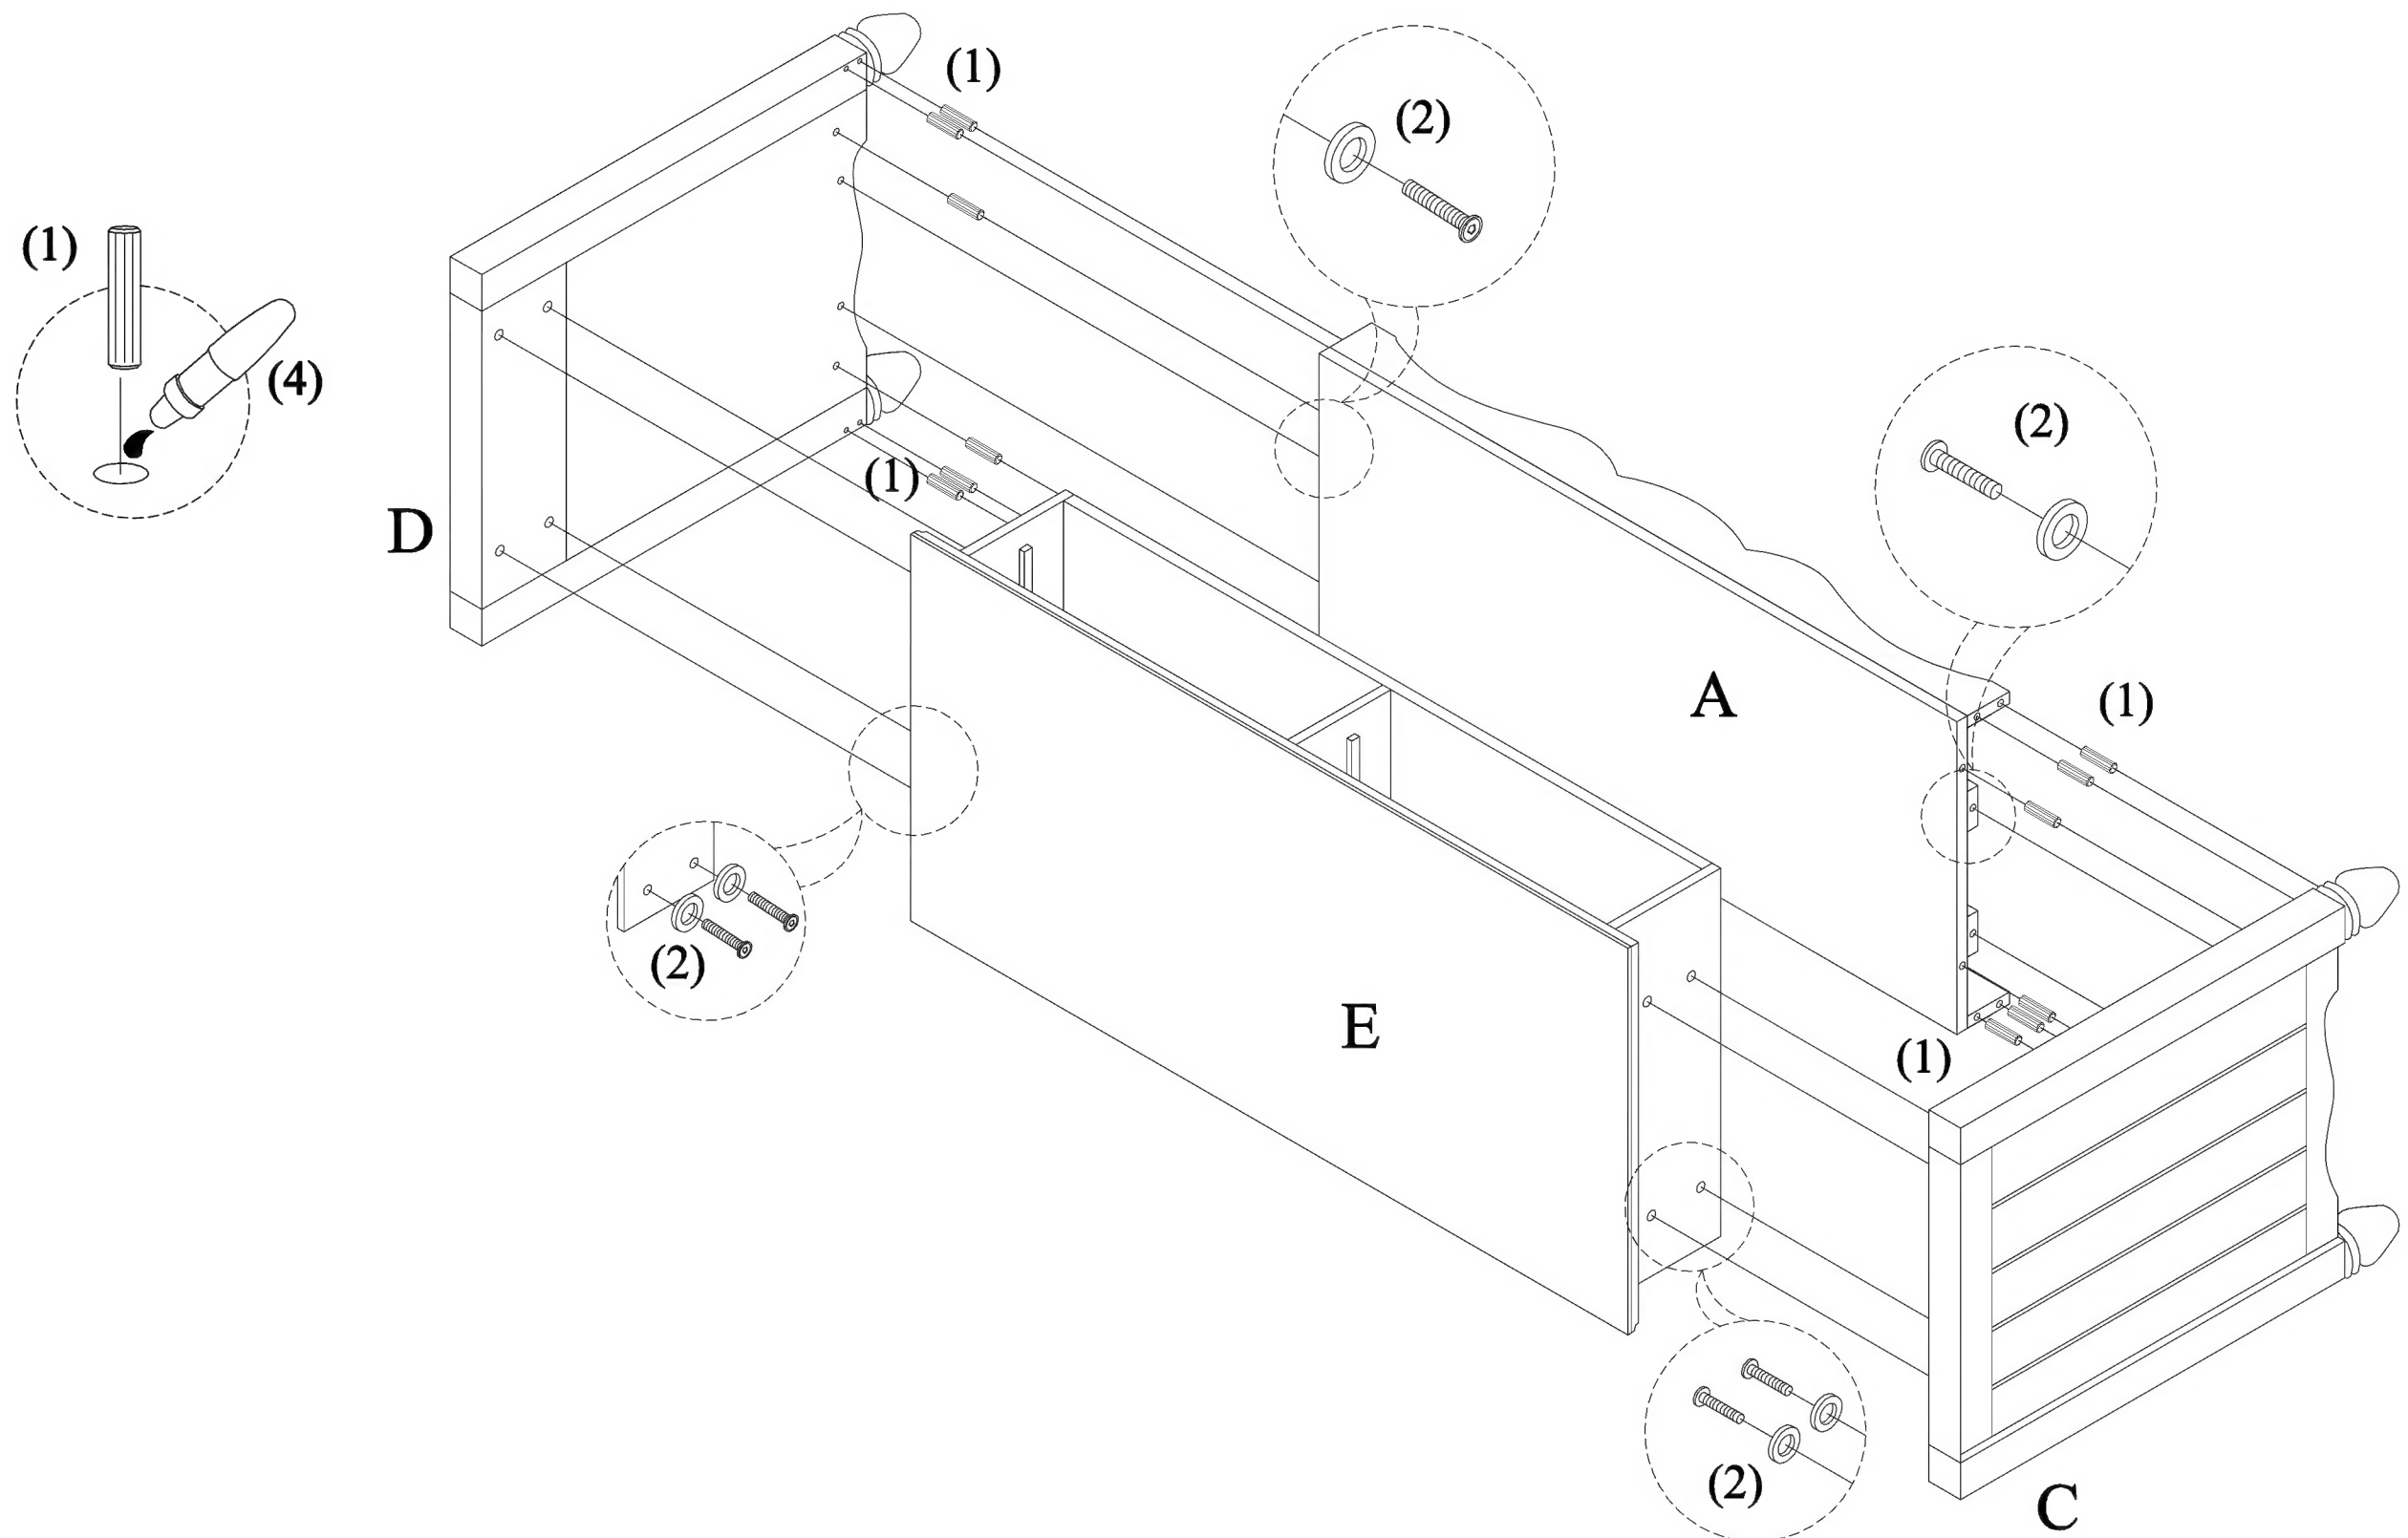

**STEP 3: PLACE DRAWER**

- PUT DRAWER INSIDE THE TABLE TOP (E).

